


**Патроны резьбонарезные 7/24 MAS BT 403**

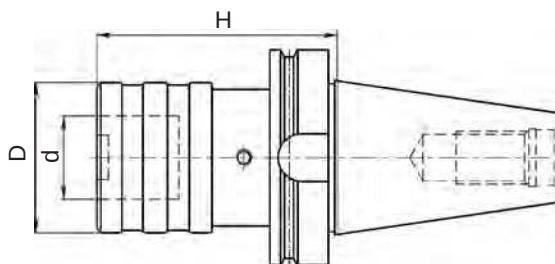

**TH-BT40...M-M**

| Обозначение    | Размеры, мм |    |    |       | Размер | Резьба  |
|----------------|-------------|----|----|-------|--------|---------|
|                | BT          | d  | D  | H     |        |         |
| TH-BT40M3-M12  | 40          | 19 | 38 | 66,5  | 1      | M3-M12  |
| TH-BT40M8-M20  | 40          | 31 | 53 | 93,5  | 2      | M8-M20  |
| TH-BT40M14-M32 | 40          | 48 | 78 | 162,5 | 3      | M14-M32 |



**TH-BT50...M-M**

|                |    |    |    |       |   |         |
|----------------|----|----|----|-------|---|---------|
| TH-BT50M3-M12  | 50 | 19 | 38 | 101,5 | 1 | M3-M12  |
| TH-BT50M8-M20  | 50 | 31 | 53 | 141,0 | 2 | M8-M20  |
| TH-BT50M14-M32 | 50 | 48 | 78 | 164,5 | 3 | M14-M32 |

Вставки  
резьбонарезные

стр. 142

**Термопатроны 7/24 MAS BT 403**

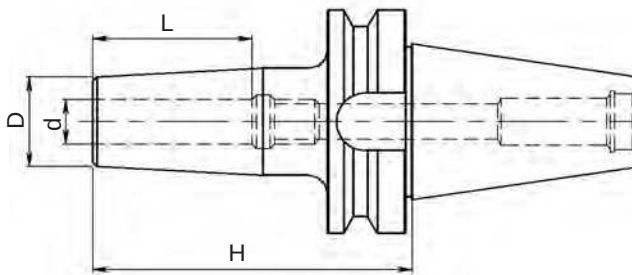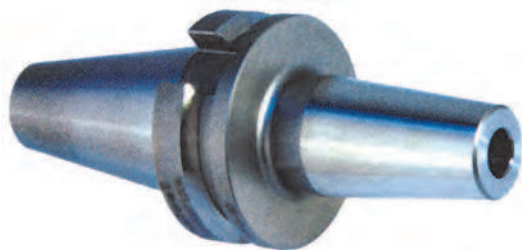

**TH-BT40...T...H**

нормальное исполнение

| Обозначение    | Размеры, мм |    |    |    |     |
|----------------|-------------|----|----|----|-----|
|                | BT          | d  | D  | L  | H   |
| TH-BT40T06H090 | 40          | 6  | 20 | 36 | 90  |
| TH-BT40T08H090 | 40          | 8  | 20 | 36 | 90  |
| TH-BT40T10H090 | 40          | 10 | 24 | 42 | 90  |
| TH-BT40T12H090 | 40          | 12 | 24 | 47 | 90  |
| TH-BT40T14H090 | 40          | 14 | 27 | 47 | 90  |
| TH-BT40T16H090 | 40          | 16 | 27 | 50 | 90  |
| TH-BT40T18H090 | 40          | 18 | 33 | 50 | 90  |
| TH-BT40T20H090 | 40          | 20 | 33 | 52 | 90  |
| TH-BT40T25H100 | 40          | 25 | 44 | 58 | 100 |
| TH-BT40T32H100 | 40          | 32 | 44 | 58 | 100 |

**TH-BT40...T...H**

длинное исполнение

|                |    |    |    |    |     |
|----------------|----|----|----|----|-----|
| TH-BT40T06H160 | 40 | 6  | 20 | 36 | 160 |
| TH-BT40T08H160 | 40 | 8  | 20 | 36 | 160 |
| TH-BT40T10H160 | 40 | 10 | 24 | 42 | 160 |
| TH-BT40T12H160 | 40 | 12 | 24 | 47 | 160 |
| TH-BT40T14H160 | 40 | 14 | 27 | 47 | 160 |
| TH-BT40T16H160 | 40 | 16 | 27 | 50 | 160 |
| TH-BT40T18H160 | 40 | 18 | 33 | 50 | 160 |
| TH-BT40T20H160 | 40 | 20 | 33 | 52 | 160 |
| TH-BT40T25H160 | 40 | 25 | 44 | 58 | 160 |

**TH-BT50...T...H**

нормальное исполнение

| Обозначение    | Размеры, мм |    |    |    |     |
|----------------|-------------|----|----|----|-----|
|                | BT          | d  | D  | L  | H   |
| TH-BT50T06H100 | 50          | 6  | 20 | 36 | 100 |
| TH-BT50T08H100 | 50          | 8  | 20 | 36 | 100 |
| TH-BT50T10H100 | 50          | 10 | 24 | 42 | 100 |
| TH-BT50T12H100 | 50          | 12 | 24 | 47 | 100 |
| TH-BT50T14H100 | 50          | 14 | 27 | 47 | 100 |
| TH-BT50T16H100 | 50          | 16 | 27 | 50 | 100 |
| TH-BT50T18H100 | 50          | 18 | 33 | 50 | 100 |
| TH-BT50T20H100 | 50          | 20 | 33 | 52 | 100 |
| TH-BT50T25H110 | 50          | 25 | 44 | 58 | 110 |
| TH-BT50T32H110 | 50          | 32 | 44 | 58 | 110 |

**TH-BT50...T...H**

длинное исполнение

|                |    |    |    |    |     |
|----------------|----|----|----|----|-----|
| TH-BT50T06H160 | 50 | 6  | 20 | 36 | 160 |
| TH-BT50T08H160 | 50 | 8  | 20 | 36 | 160 |
| TH-BT50T10H160 | 50 | 10 | 24 | 42 | 160 |
| TH-BT50T12H160 | 50 | 12 | 24 | 47 | 160 |
| TH-BT50T14H160 | 50 | 14 | 27 | 47 | 160 |
| TH-BT50T16H160 | 50 | 16 | 27 | 50 | 160 |
| TH-BT50T18H160 | 50 | 18 | 33 | 50 | 160 |
| TH-BT50T20H160 | 50 | 20 | 33 | 52 | 160 |
| TH-BT50T25H160 | 50 | 25 | 44 | 58 | 160 |
| TH-BT50T32H160 | 50 | 32 | 44 | 58 | 160 |