


Оправки 7/24 MAS BT 403 для торцовых фрез с посадкой форм А, В и С

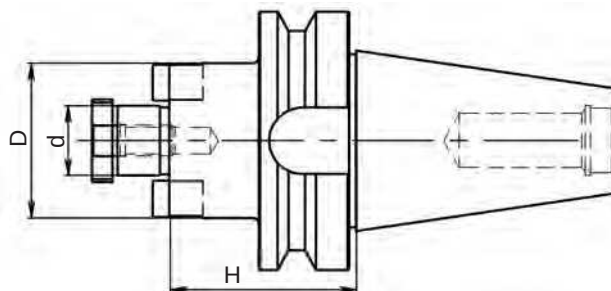

TH-BT40...A,B,C...H

$n_{max}=8\ 000$ об/мин

Обозначение	Размеры, мм			
	BT	d	D	H
TH-BT40A16H040	40	16	40	40
TH-BT40A16H100	40	16	40	100
TH-BT40A22H045	40	22	48	45
TH-BT40A22H100	40	22	48	100
TH-BT40B27H045	40	27	60	45
TH-BT40B27H100	40	27	60	100
TH-BT40B32H050	40	32	78	50
TH-BT40B32H100	40	32	78	100
TH-BT40C40H055	40	40	89	55
TH-BT40C40H100	40	40	89	100
TH-BT40C50H080	40	50	129	80

TH-BT50...A,B,C...H

$n_{max}=8\ 000$ об/мин

Обозначение	BT	d	D	H
TH-BT50A16H055	50	16	40	55
TH-BT50A22H055	50	22	48	55
TH-BT50A22H100	50	22	48	100
TH-BT50B27H055	50	27	60	55
TH-BT50B27H100	50	27	60	100
TH-BT50B32H055	50	32	78	55
TH-BT50B32H100	50	32	78	100
TH-BT50C40H055	50	40	89	55
TH-BT50C40H100	50	40	89	100
TH-BT50C60H080	50	60	130	80

Оправки балансируемые 7/24 MAS BT 403 для торцовых фрез с посадкой формы А с внутренней подачей СОЖ

TH-BT40...A...H...ADG2.5

балансируемые $n_{max}=20\ 000$ об/мин G2.5

Обозначение	Размеры, мм			
	BT	d	D	H
TH-BT40A16H055ADG2.5	40	16	40	55
TH-BT40A16H100ADG2.5	40	16	40	100
TH-BT40A22H060ADG2.5	40	22	48	60
TH-BT40A22H100ADG2.5	40	22	48	100
TH-BT40A27H060ADG2.5	40	27	60	60
TH-BT40A32H065ADG2.5	40	32	78	65
TH-BT40A40H080ADG2.5	40	40	89	80

TH-BT50...A...H...ADG2.5

балансируемые $n_{max}=20\ 000$ об/мин G2.5

Обозначение	BT	d	D	H
TH-BT50A16H070ADG2.5	50	16	40	70
TH-BT50A22H070ADG2.5	50	22	48	70
TH-BT50A22H100ADG2.5	50	22	48	100
TH-BT50A27H070ADG2.5	50	27	60	70
TH-BT50A27H100ADG2.5	50	27	60	100
TH-BT50A32H070ADG2.5	50	32	78	70
TH-BT50A32H100ADG2.5	50	32	78	100
TH-BT50A40H075ADG2.5	50	40	89	75
TH-BT50A40H100ADG2.5	50	40	89	100

Балансировочный элемент



HSK63

B510805

HSK100

B840805

Винт балансировки



H600500-30

Ключ балансировки



7003H